

FLUSH E/C SAMPLING KIT (COMP-0019F-EC-ABS-R25 - 25mm)

Compatible[®]

EN

This component is used when it is necessary to sample through a suspended ceiling. The capillary end cap fits onto the end of the pipe run. There is then a 2 meter 10mm OD nylon tube which links into the flush sampling head, which is fixed by a nylon nut/washer to the ceiling tile.

Installation Instructions:

Use the correct solvent Plusbond 3019. Do not paint. Keep pipe clean and free from dust. Do not install in direct sunlight. Only install with approved pipe. Do not use solvents to clean, only soapy water.

TR

Bu bileşen, asma tavandan numune alınması gerektiğinde kullanılır. Kılcal uç kapağı boru hattının ucuna takılır. Daha sonra 2 metrelik 10mm OD naylon tüp, naylon bir somunla tavana bağlanan flush örnekleme başlığına bağlanır.


Kurulum Talimatları:

Doğru solvent Plusbond 3019 kullanın. Boya yapmayın. Boruyu temiz ve tozsuz tutun. Doğrudan güneş ışığı altında montaj yapmayın. Sadece onaylı boru ile monte edin. Temizlemek için solvent kullanmayın, sadece sabunlu su kullanın.

PART NO.:
-40°C to 70°C

**FITTINGS
COLOUR:**
Red

**DIAMETER
TOLERANCE:**
+ / - 0.15mm

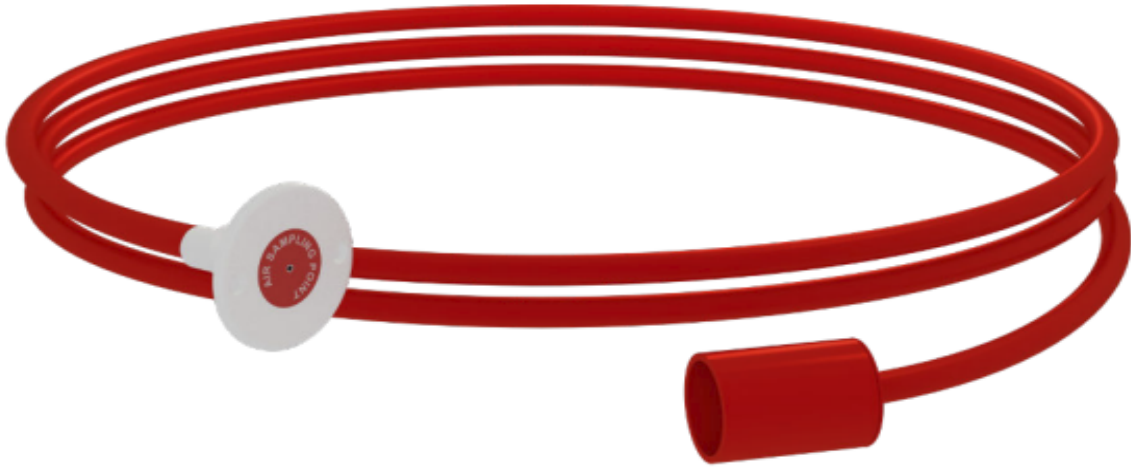

**JOINTING SOCKET WITH
CAPILLARY ADAPTOR**



**10MM NYLON TUBING
STANDARD LENGTH 2M**



**ABS019F/HO FLUSH HEAD
M16 Plastic NUT**

